

Key	Shift Key	Ctrl Key	Grph Key	Grph Key	Shift	Code	Shift
						Key	Code Key
a	97	A 65	1	133	235	ä 182	A 177
b	98	B 66	2	149	—	—	—
c	99	C 67	3	132	255	ç 162	Ç 171
d	100	D 68	4	—	237	é 187	E 215
e	101	E 69	5	143	233	e 198	E 214
f	102	F 70	6	130	238	—	f 191
g	103	G 71	7	—	253	—	—
h	104	H 72	8	134	251	—	—
i	105	I 73	9	142	243	i 199	I 213
j	106	J 74	10	—	244	ü 203	U 219
k	107	K 75	11	155	250	ı 201	I 217
l	108	L 76	12	154	249	o 202	O 218
m	109	M 77	13	129	246	—	µ 165
n	110	N 78	14	150	—	ñ 205	—
o	111	O 79	15	152	242	ô 183	O 178
p	112	P 80	16	128	241	¼ 172	—
q	113	Q 81	17	147	231	á 200	A 216
r	114	R 82	18	137	234	—	Ⓡ 170
s	115	S 83	19	139	236	ş 169	Ş 185
t	116	T 84	20	135	252	—	Ⓣ 186
u	117	U 85	21	145	240	ü 184	Ü 179
v	118	V 86	22	—	—	è 189	E 222
w	119	W 87	23	148	232	—	—
x	120	X 88	24	131	239	à 161	A 223
y	121	Y 89	25	144	254	ý 204	Y 220
z	122	Z 90	26	—	224	á 206	—
1	49	! 33	49	136	225	â 192	A 208
2	50	@ 64	50	156	226	—	—
3	51	# 35	51	157	227	ë 193	E 209
4	52	\$ 36	52	158	228	—	—
5	53	% 37	53	159	229	—	—
6	54	^ 94	54	180	230	—	—
7	55	& 38	55	176	—	u 196	U 212
8	56	* 42	56	163	—	i 194	I 210
9	57	(40	57	123	—	ö 195	O 211
0	48) 41	48	125	—	ı 175	ı 166
-	45	_ 95	45	92	124	· 197	· 167
=	61	+ 43	61	141	—	- 190	† 168
[91] 93	27 (shft 29)	96	126	- 181	—
:	59	; 58	59 (shft 58)	146	1245	¾ 173	—
.	39	" 34	39 (shft 34)	140	—	· 160	· 164
,	44	< 60	44 (shft 60)	153	248	ú 188	U 221
/	46	> 62	46 (shft 62)	151	247	õ 207	—
?	47	? 63	47 (shft 63)	138	—	½ 174	—

CODES PRODUCED BY OTHER KEYS

ESC	27	CTRL-	18
TAB	9	I	30
CTRL	—	SHFT I	20
BKSP	8	CTRL I	23
DEL	127	I	31
-	29	SHFT I	2
SHFT-	1	CTRL I	26
CTRL-	17	ENTER	13
-	28	SPACEBAR	32
SHFT-	6		

FUNCTION KEYS

These 8 keys are used extensively by the applications programs which are included in the Model 100. You can see their "definitions" at any time by pressing the **LABEL** command key. The 8th (bottom) line of the display will show the currently assigned definitions. The programmer can re-define these keys from within BASIC to make any BASIC program easier to use!

COMMAND KEYS

Four keys, two with dual purposes:

PASTE—It may sound funny, but that's exactly what this key does. It "pastes" text, which has been saved in

a special location in memory, to the current position of the cursor. **PASTE** is most often used in the TEXT applications program to insert a block of text which has been defined at some other point in the document. **PASTE** can easily be used to copy selected portions of one BASIC program to another BASIC program, or to copy material from one text document to another text document.

LABEL—This key is a "switch." Pressing it once will display the current definitions of the 8 function keys on the 8th line of the LCD and leave them there. The Model 100 will respect that you want to see the key definitions and so will only use the top 7 lines of the display for showing you whatever else it has to say. Pressing **LABEL** again will remove the definitions and restore all 8 lines to the screen.

PRINT—the **PRINT** key is the first of the two dual purpose command keys. If you have a printer connected to the Model 100, pressing **PRINT** will send a copy of the current display to the printer. Pressing **SHIFT PRINT** will do slightly different things, depending on which of the Model 100's programs you are in:

PROGRAM	ACTION
BASIC	LLIST the current BASIC program if you are at BASIC's Ok prompt
TEXT	Prints the entire current file
TELCOM	—
ADDRSS	—
SCHEDL	—

BREAK / PAUSE—This is the second dual purpose command key. In most programs, pressing **SHIFT BREAK / PAUSE** will cause whatever is in progress to stop.

Pressing **BREAK / PAUSE** while in BASIC with a program running, will cause the program to stop running. Pressing **BREAK / PAUSE** again will allow the program to continue execution.

CURSORS KEYS

All 4 cursor keys are fully operational in the TEXT program while only left and right operate in BASIC.

SPECIAL KEYS

DEL / BKSP—If you are in the TEXT program, pressing the **DEL / BKSP** key alone, will cause the character behind the cursor to be erased and the cursor will back up one position. When pressed with the **SHIFT** key, the character *under* the cursor will be erased.

If you are entering a BASIC program, using the **DEL / BKSP** key with or without the **SHIFT** key will cause the character *behind* the cursor to be erased and the cursor will back up one position.

LOW BATTERY LIGHT

This small LED will come on when approximately 15 minutes of power-on operation time remains. You should change batteries or go onto external power at this time. If you are located such that both of these options are impossible, simply turn the Model 100 off, all your programs and data will be retained by the internal Ni-Cad batteries for between 8 to 30 days depending on how much random access memory you have installed. 8K of RAM can be maintained for approximately 30 days while 32K RAM can be maintained for approximately 8 to 10 days.